



noordi

Fjordi / Fjordi Classic


USER GUIDE

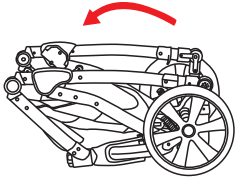


1

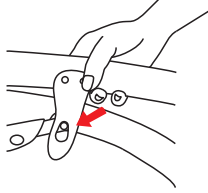


2

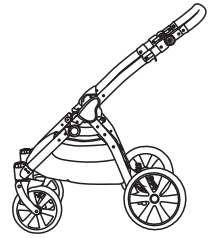


3

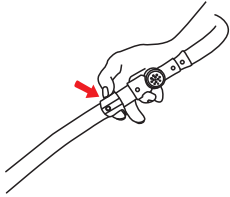


4

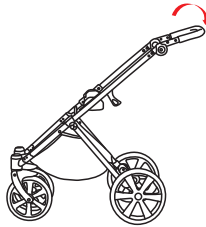


5

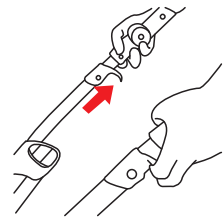


6

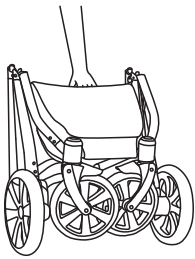


7

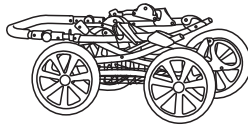


8

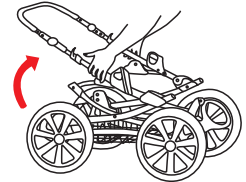


9

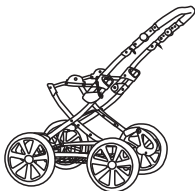


10

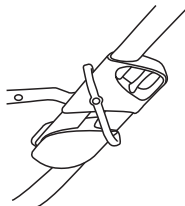


11

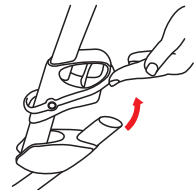


12

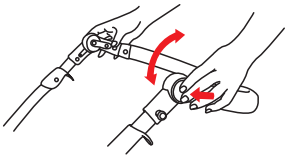


13

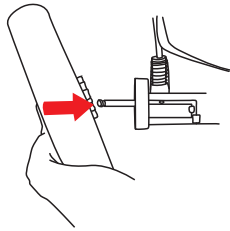


14

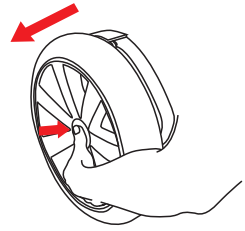


15

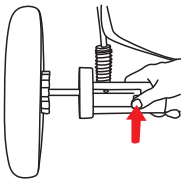


16

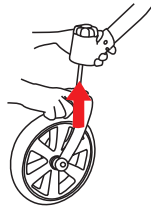


17

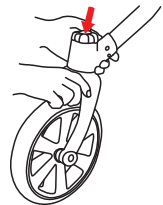


18

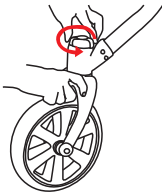


19

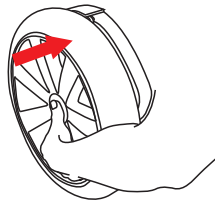


20

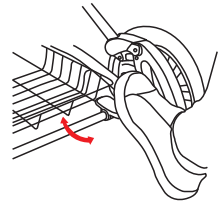


21

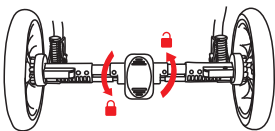


22

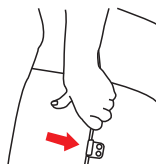

23

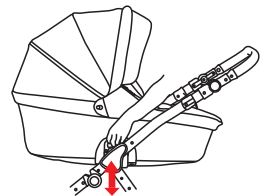


24

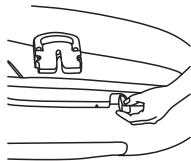


25

Suitable only for Sole strollers.

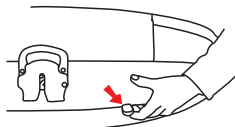


26

Suitable only for Sole strollers.

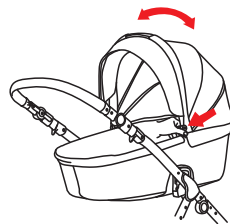


27


Suitable for all models of the stroller.

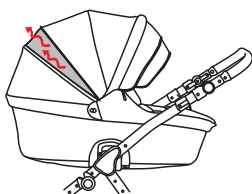

28

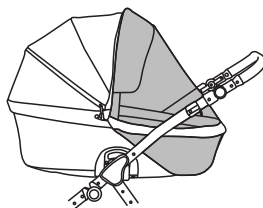


29

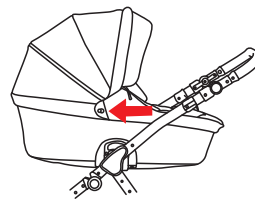


30

Suitable for all models of the stroller.

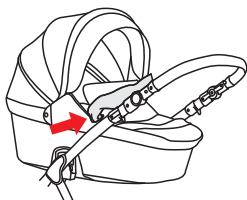


31


Suitable for all models of the stroller.

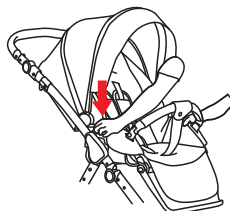


32

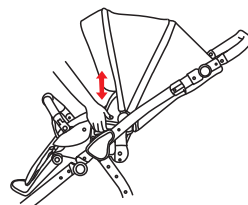


33

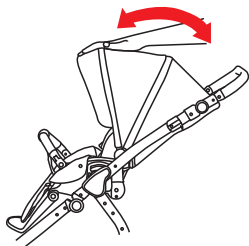


34

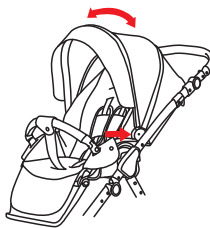


35

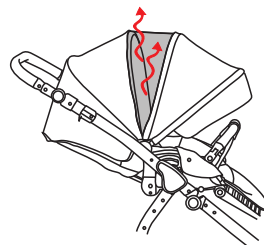


36

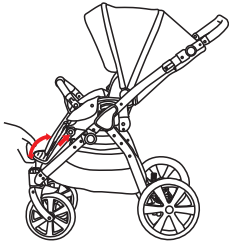


37

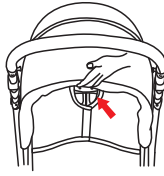


38

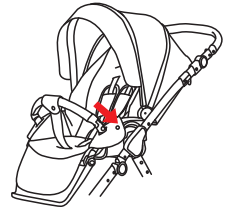


39

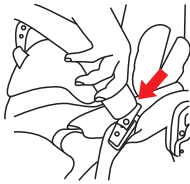


40

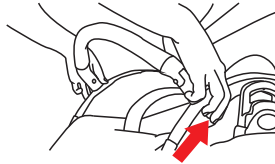


41

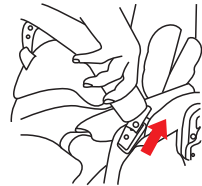


42

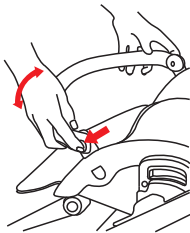


43

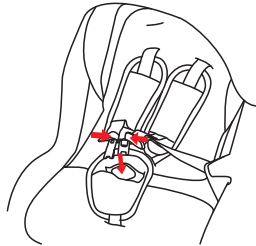


44

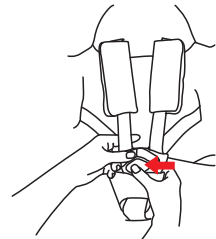


45

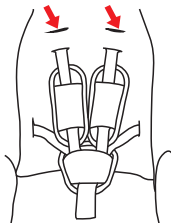


46

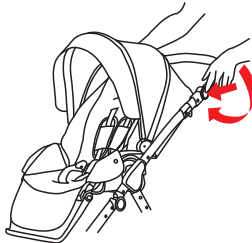


47

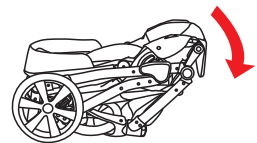


48

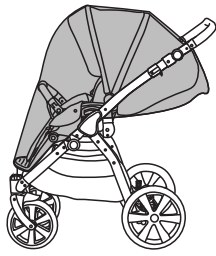


49

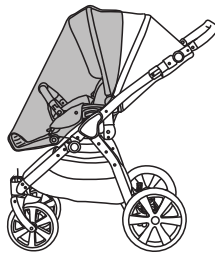


50

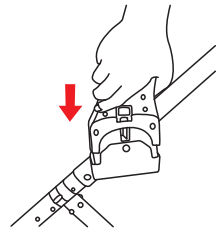


51

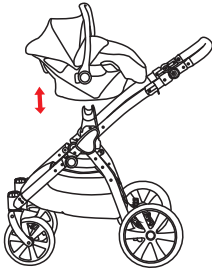


52

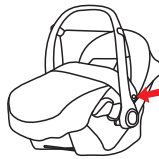


53

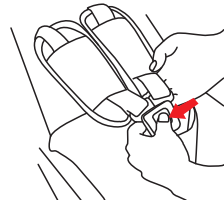


54

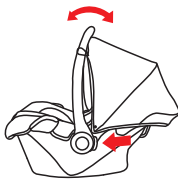

55

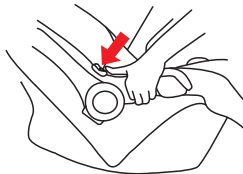

56

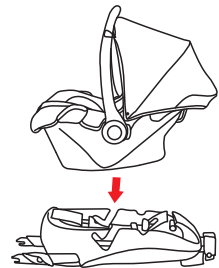

57

DEAR PARENTS!

We would like to express our sincere gratitude for purchase of the baby stroller **NOORDI**!

We have created this wonderful baby stroller in accordance with the EU standards. We are proud to present a solution that will grant exclusive comfort for Your child and ensure practical usage for you. Please read the instruction carefully and learn about all the possibilities provided by Your baby stroller. This will help to ensure the safety and comfort of Your baby.

We hope that the baby stroller **NOORDI** will be easy to use for your family and that it will contribute to many pleasant moments experienced by You!

Sincerely,

NOORDI

IMPORTANT- READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

EN 1888-1:2018

- **WARNING: ENSURE THAT ALL THE LOCKING DEVICES ARE ENGAGED BEFORE USE.**
- **WARNING: USE SAFETY BELTS UNTIL THE CHILD IS ABLE TO SIT INDEPENDENTLY.**
- **WARNING: ALWAYS USE THE RESTRAINT SYSTEM.**
- **WARNING: NEVER LEAVE YOUR CHILD UNATTENDED.**
- **WARNING: TO AVOID INJURY ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN UNFOLDING AND FOLDING THIS PRODUCT.**
- **WARNING: DO NOT LET YOUR CHILD PLAY WITH THIS PRODUCT.**
- **WARNING: THE BABY STROLLER'S BALANCE MAY BE AFFECTED BY ANY HEAVY ITEM HUNG ON ITS HANDLE.**
- **WARNING: CHECK THAT THE PRAM BODY OR SEAT UNIT OR CAR SEAT ATTACHMENT DEVICES ARE CORRECTLY ENGAGED BEFORE USE.**
- **WARNING: DO NOT USE ANY ADDITIONAL MATTRESSES IN THE BABY STROLLER.**
- **WARNING: THIS PRODUCT IS NOT SUITABLE FOR RUNNING OR SKATING.**

NOTICES

- Before using the baby stroller, it is necessary to read this instruction and keep it for the next time.
- The baby may be endangered if the instructions are not followed.
- Only the original parts and mechanisms or the parts and mechanisms approved by manufacturer may be used in the baby stroller.
- The baby stroller has to be kept out of reach of children.
- If the baby stroller is kept in the places with big temperature changes, it may cause condensation inside of the stroller.
- The baby stroller is designed for 0-36 months old babies, whose weight does not reach 15 kg.
- The seat unit is not suitable for babies under 6 months. Do not use the seat unit until the baby learns to sit independently.
- The baby car seat is designed for 0-6 months old babies, weighing up to 13 kg. It is meant for the baby who cannot sit independently or roll over for crawling on his hands and knees.
- The baby car seat cannot replace a carrycot or a bed. Should your child need to sleep, s/he has to be placed in suitable carrycot or bed.
- The baby stroller is designed to carry only one child.
- Do not use the baby stroller if any of its elements is damaged.
- Make sure that the product and all its components are in order before installation; in case of any damages the product cannot be used.
- Make sure that the baby is within the sufficient distance from the baby stroller when folding it.
- Use brakes when the baby stroller is not moving and when the baby is taken out or put in.
- Make sure that the fastening devices of the carrycot, seat unit and car seat are fixed well before using the baby stroller.
- The seat unit is not designed to carry the sitting baby by the top handle.
- Make sure that the moving parts do not touch the baby's body when adjusting the baby stroller.
- Never leave the baby in the stroller standing on the inclined surface, even if the brakes are blocked.
- Any bag or other heavy item hanging on the stroller's handle impairs its balance: the biggest load of the shopping bag is 2 kg and the biggest load of the purse is 1 kg.
- Lift the front wheels when going on the pavement or stairs.
- Never use the baby stroller to go down the stairs.

- This product is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 9 kg
- The Noordi Fjordi carrycot is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 9 kg (in the case of the carrycot).
- Noordi Fjordi is designed for children aged 0 to 24 months. Max. weight: 15 kg.
- The Noordi Fjordi chassis can only be used only with a Fjordi carrycot or a Fjordi seat unit.
- This instruction is suitable for all models of Noordi strollers: Fjordi, Fjordi Classic, Sole, Sole Classic, Polaris, Luno. The title of the model of the stroller is written on the front leg of the chassis.

SPORT CHASSIS' PREPARATION FOR USE

1. Put the baby stroller's frame horizontally on the floor (Fig. 1).
2. Remove the protection present on the side of the frame (Fig. 2)
3. Hold the handle and pull it hard up to fixate the frame system (Fig. 3)
4. Before folding the frame make sure that the front wheels are not blocked. They have to rotate around own axis. Depending on the frame's modification, press black buttons under the handle by both hands at the same time or press the buttons of adapters present on both sides of the frame. In the first case pull the adapters towards yourself synchronically. In the second case bend the handle down to the frame (Fig. 4,5,6).
5. Keep on the handle and slightly push the frame down to the horizontal position (Fig. 1).
6. Do not forget to hook the protection up (Fig. 2).
7. Depending on the frame's modification, you may carry the folded construction conveniently by the handle (Fig. 7)

CLASSICAL CHASSIS' PREPARATION FOR USE

1. Put the baby stroller's frame horizontally on the floor (Fig. 8).
2. Hold the handle and pull it hard up to fixate the frame system (Figs. 9,10)
3. In order to fold the frame, lift the frame's retainer up and pull the adapters towards yourself synchronically from both sides (Figs. 11, 12).
4. Slightly push the frame down to the horizontal position (Fig. 8).

ADJUSTMENT OF HANDLE'S HEIGHT

1. Press synchronically the round buttons on the sides of the handle (Fig. 13).
2. Adjust the handle's height that would be the most convenient for you (Fig. 13).

REMOVAL/ATTACHMENT OF REAR WHEELS

1. In order to attach the wheel, insert the blunt tip of the wheel's axis into the wheel. The pointed tip has to be directed to the place of mounting. Slightly push the wheel towards the frame (Fig. 14).
2. In order to remove the wheel, slightly press its centre and pull it from the place of mounting at the angle of 90 degrees (Fig. 15).
3. The wheel may be removed together with the axis by pressing the button on the internal side of the frame, by the place of mounting (Fig. 16).

REMOVAL/ATTACHMENT AND BLOCKING OF THE FRONT WHEELS IN CASE OF SPORT CHASSIS

1. The stroller's frame has two front driving wheels which are rotating around own axis at 360° angle.
2. In order to attach the wheel, insert the blunt tip of the wheel's axis into the wheel. The pointed tip has to be directed to the place of mounting. Slightly lift the wheel up (Fig. 17).

3. In order to remove the wheel, push down the button above the wheel. The wheel is removed together with the axis (Fig. 18).
4. In order to block the wheel, turn the plastic wheel below the removal button (Fig. 19).

REMOVAL/ATTACHMENT AND BLOCKING OF THE FRONT WHEELS IN CASE OF CLASSICAL CHASSIS

1. In order to attach the wheel, insert the blunt tip of the wheel's axis into the wheel. The pointed tip has to be directed to the place of mounting. Slightly push the wheel towards the frame (Fig. 20).
2. In order to remove the wheel, slightly press its centre and pull it from the place of mounting at the angle of 90 degrees (Fig. 15).

BRAKES

1. The stroller has parking brakes, which block the rear wheels. In order to stop, press the brake pedal down with your foot. One press will serve to block both rear wheels (Fig. 21).
2. In order to start moving, lift the brake pedal up (Fig. 22).

PUTTING THE CRADLE IN/OUT

1. Remove the cradle from the transport package. If the walls of the cradle you have bought are lowered, put the frontal and rear supports inside the cradle at the angle of 90 degrees (Fig. 23). Put the mattress in and unbend the hood.
2. Depending on the model, the cradle's back may be lifted when the support in its internal part is unbent or when the handle outside of the cradle is turned.
3. Depending on the model, the back may have ventilation that could be easily adjusted by pulling the handle outside of the cradle.
4. Insert the cradle's adapters into the holders on the internal side of the frame (Fig. 24).
5. The adapters are blocked automatically. Make sure that they have fixated before usage.
6. If you want to remove the cradle, lift the buttons present in the cradle's adapters up (Fig. 24).
7. When the cradle is taken off and put on the floor, the rocking movements may be performed. The legs on the sides of the cradle help to stabilize the cradle safely (Fig. 25,26).

CRADLE'S HOOD AND LEG COVER

1. The cradle has a comfortable hood that protects the baby from the forces of nature: wind, sun, snow, and rain.
2. The hood's position may be adjusted by pressing the red button under the handle (Fig. 27).
3. The small air vent and insect screen are present on the hood. You may unfold it by unzipping the zipper present on the hood (Fig. 28).
4. The insect screen is fastened reliably to the hood. (Fig. 29).
5. The cradle has a leg cover that is put in the frontal part and fixated by two clips on the sides of the hood

(Fig. 30).

6. Depending on the modification, the leg cover may be opened by zippers without removal (Fig. 31).

ATTACHMENT/REMOVAL OF THE SEAT UNIT

1. Insert the seat unit's adapters into the holders on the internal side of the frame (Fig. 32).
2. The adapters are blocked automatically. Make sure that they have fixated before usage.
3. In order to remove the seat unit, lift the buttons in the cradle's adapters up (Fig. 33).
4. The position of the seat unit may be changed: face or back turned to mother.

SEAT UNIT'S HOOD, BABY STROLLER'S PLATFORM AND LEG COVER

1. The seat unit has an ergonomic hood that protects reliably the baby from the forces of nature: wind, sun, snow, and rain.
2. Depending on the modification, the hood's position may be adjusted by slightly bending/unbending the primary hoop of the hood (Fig. 34) or by pressing the button under the handle (Fig. 35).
3. The small panoramic window is present on the hood. You may unfold it by unzipping the zipper on the hood (Fig. 36).
4. The platform's height may be adjusted by pressing synchronically the buttons, which are located in parallel on both sides of the platform (Fig. 37).
5. The seat unit's back is adjusted by the handle on the reverse side. The back may be fixated in four comfortable positions with the help of lifting movement of fingers (Fig. 38).
6. The leg cover is put in the frontal part and fixated by two clips on the internal sides of the seat unit (Fig. 39).

PROTECTIVE HANDLE OF THE SEAT UNIT

1. The seat unit has a protective handle. It may be fastened by inserting its bolts into the holders on both sides of the seat unit (Figs. 40, 41).
2. In order to put the baby in/take the baby out, press one of the buttons at the bottom of the bolts. Pull the handle slightly and open it to the side (Fig. 42).
3. Depending on the model, the position of fastened protective handle may be regulated by pressing the buttons on the handle (Fig. 43).

SAFETY BELTS

1. The seat unit has a 5-point system of safety belts.
2. When the baby is put in the seat unit, the safety belts have to be fastened. Simply insert the levers into the lock and strain the belts (Fig. 44).
3. In order to unfasten the belts, press the levers and take them out of the lock (Fig. 45).
4. The optimal height of belts' fastening may be selected according to the child's height. The fastening position is easy to change (Fig. 46).

FOLDING OF THE SEAT UNIT TOGETHER WITH THE FRAME IF THE MODIFICATION OF SPORT CHASSIS IS BOUGHT

1. Unfasten and remove the leg cover of the seat unit and the protective handle (Fig. 47).
2. Unbend the back to the final sitting position. Block the brake. Unblock the front wheels.
3. Depending on the modification, press the black buttons under the handle by both hands simultaneously or press the buttons of adapters present on both sides of the frame. Pull the adapters towards yourself synchronically or bend the handle down to the frame (Fig. 4,5,6).
4. Keep on the handle and slightly push the frame down to the horizontal position (Fig. 48).
5. Do not forget to hook the protection up (Fig. 2).
6. Press the platform down (Fig. 37).

PROTECTION FROM RAIN AND INSECTS

Depending on the model, the stroller has unified protection from rain (Fig. 49) and insects (Fig. 50), which is suitable both for the seat unit and the cradle.

BABY CAR SEAT

1. The baby car seat may be fastened to the baby stroller's frame regardless whether the chassis modification is sport or classical.
2. In order to fasten the car seat, insert the adapters into the holders on the internal side of the frame (Fig. 51).
3. The adapters are blocked automatically. Make sure that they have fixated before usage.
4. Insert the holders of the car seat into the specially mounted adapters (Fig. 52).
5. The car seat has a specially adjusted hood, which is fastened by clips to the body of the car seat (Fig. 53).
6. The car seat has a cotton cushion and a 3-point system of safety belts (Fig. 54).
7. The car seat's handle is inseparable from the seat's body. It is adjusted by pressing synchronically the side buttons. When the buttons are pressed, slightly push the handle in the direction you need (Fig. 55).
8. In order to remove the car seat from the holders, press the buttons inside the seat's body (Fig. 56).
9. The car seat may be fastened in the car ISOFIX base (Fig. 57).

WARRANTY CONDITIONS

1. NOORDI JSC gives the warranty for this product. The warranty period is specified in the purchase document of the baby stroller that is executed and approved by the stroller's seller.
2. All the claims for the product's defects shall be brought to the company, where you have purchased the product. No claims for the scratches, which appear after the purchase, shall be accepted.
3. The warranty repairs shall be performed by the manufacturer or the service company indicated by the seller.
4. The physical defects of the baby stroller noticed during the warranty period shall be removed free of charge in 21 days at the most after the baby stroller has been brought to the company (through mediation of the seller).
5. The warranty period is extended accordingly to the duration of repair.
6. The warranty provider shall determine the type of repair works.
7. The product, regarding which the claim has been brought, has to be delivered clean.
8. If the warranty document is lost, no duplicates will be issued.
9. The warranty issued for the sold consumables does not negate or suspend the purchaser's rights related to non-compliance of the item with the contract's conditions.
10. In order to have the customers completely satisfied with their baby strollers, NOORDI JSC reserves the right to make changes in the stroller's design without notification of the purchasers.

WARRANTY IS NOT APPLICABLE

1. When the product shows wear naturally during usage.
2. For damages caused by improper usage or improper maintenance.
3. According to the new EU standards, the baby stroller is considered to be the above-ground vehicle, therefore it cannot be returned.
4. For the repair works performed by unauthorized persons.
5. For the wheels of the baby stroller.
6. For the damages and tears caused by the purchaser.
7. For discolouration of fabrics because of long-term exposure to sun.

GENERAL MAINTENANCE


- Prolonged exposure to sunlight can change the colour of fabrics and materials of the baby stroller. In order to keep the materials in original colour as long as possible, never leave the baby stroller in direct sunlight for a longer period of time.
- Always use protection from rain when it is raining or snowing.
- In order to protect the baby stroller from condensation and mould, never keep it in the cold and/or humid place.
- If the frame is wet, dry it out. Make sure that the baby stroller is completely dry before leaving it in the storage place. Dry it out naturally, away from open flame/ heat sources.
- Prevent penetration of salty water into the baby stroller

as it may cause rust. In such a case the frame has to be washed and dried out.

- Be careful while transporting and storing the baby stroller as its surface is sensitive.
- No claims for the scratches, which appear after the purchase, shall be accepted.
- Do not place the baby stroller on light flooring (especially PVC or linoleum) for longer periods of time because the rubber tires may leave black stripes.

PERIODIC INSPECTION

- Clean and dry the frame out regularly. Lubricate all its connections. If the baby stroller is used in winter, clean it at least once in a week because insufficient cleaning may result in rust.
- It is necessary to control the wear level of the wheels and to clean them from dust and sand. The recommended pressure in the wheels cannot exceed 1 bar.
- **It is recommended to lubricate the wheel axes, hubs and bearings every 3 months (clean them before lubrication). The axes may be lubricated with motor oils.**

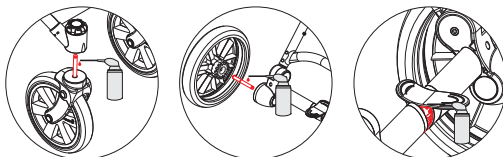

MAINTENANCE OF FABRICS

- The product has to be cleaned periodically.
- There is no need to remove upholstery of the baby stroller.
- The internal liners of the baby stroller may be hand washed at maximum temperature of 30°C. Use gentle detergents. Rinse thoroughly. Dry naturally.
- Washing of external fabrics of the baby stroller is not recommended.
- Clean the baby stroller's parts made from artificial leather with a damp cloth using gentle detergent. Dry at room temperature.
- Ironing: always put 100% cotton between the fabric and the iron to protect the fabric's surface. Only warm iron may be used.

CHECK REGULARLY

- Whether all the retainers and folding mechanisms of the baby stroller are working properly.
- Whether all the rivets, screws and nuts are tightened well and unbroken.
- Whether the plastic parts are not broken or cracked.
- Whether the wheel nuts are in good condition.
- Whether all the adhesive fasteners and clips are fastened well.
- Whether the brakes are functioning.

No.	Start of repair works	Done works	The warranty is extended until	Date, signature

The manufacturer gives the warranty until:

Date of sale

Seller

Purchaser

Purchaser's signature

UAB TUTUTIS
 Raudondvario rd. 127
 Kaunas, Lithuania.
 Tel./fax +370 37 26 72 59
 Mobile +370 652 27756
 E-mail: tututis@tututis.lt



FOLLOW NOORDI STORY

